Headset Star-nut Driver & Guide Instructions

Published – Mar, 2011. ZS109.v1 © Full Speed Ahead

WWW.FULLSPEEDAHEAD.COM

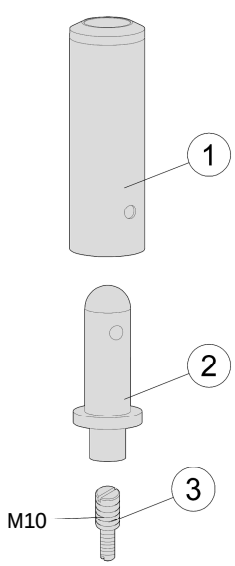

圖 1

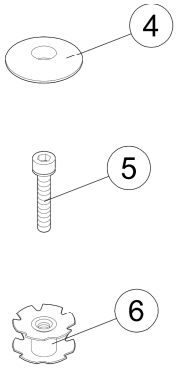

圖 2

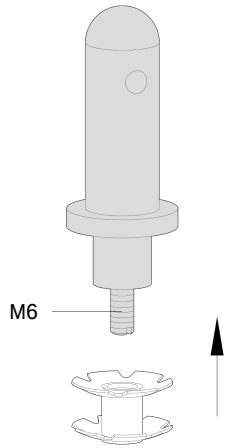

圖 3

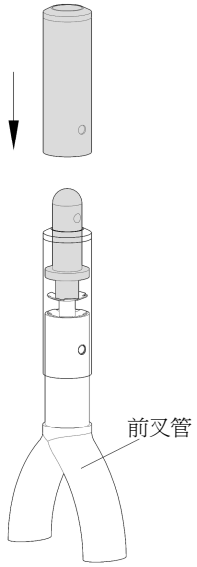

圖 4

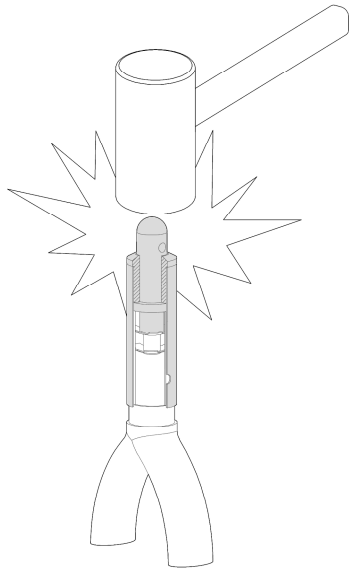
圖 5

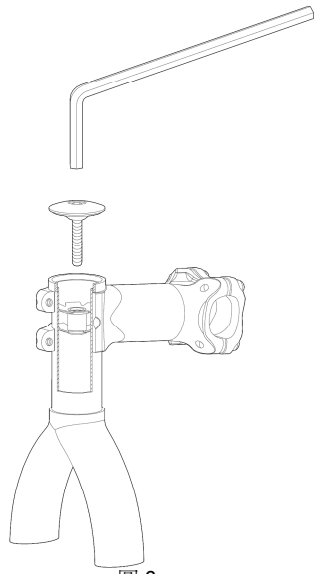
圖 6

說明

感謝您購買 FSA 產品。請閱讀此安裝說明書並遵守正確使用之。沒有遵從警告和說明書而損害產品是不在保固範圍內，如損害自行車；或造成意外以致受傷或死亡。因需使用特殊工具並需要經驗才能安裝正確，建議由合格自行車技術員安裝。FSA & Vision 不承擔因不正確安裝產品造成損傷的責任。

保固

FSA 保固 FSA、Gravity、Vision、Metropolis 與 RPM 產品無材料與製品缺陷，從原購買日起保證兩年，除非保固政策中另有規定。保固不可轉移只適用於原始購買產品。不可任意改變產品。不要鑽、鋸，或上漆。任何修改將不受保固。保固說明書可由 http://www.fullspeedahead.com/techdoc 下載取得。

產品規格

Item Number / Model Name **QR-11**

零件名稱

請依圖指示順序組裝:

① 引導器
② 保持器
③ 雙頭螺絲
④ 上蓋
⑤ 擴張螺絲
⑥ 花片

安裝說明

1. 預先將管內夾產品分別拆成上蓋 ④，擴張螺絲 ⑤，花片 ⑥ 三個零件 (圖 2)。 ⚠ WARNING (此管內夾不適用於碳纖維前叉上管)。
2. 將一字溝的雙頭螺絲 ③ M10 端朝內並鎖入保持器主體 ②，再將花片 ⑥ 鎖入雙頭螺絲 ③ M6 端，並旋轉到底 (圖 3)。
3. 手握保持器 ② 上端，並將花片 ⑥ 朝向前叉管入口後，接著在保持器 ② 上套上引導器 ① (圖 4)，使用引導器能有效讓花片 ⑥ 垂直角度插入前叉管中。
4. 手握引導器 ①，用錘子點擊保持器 ② 圓頭部，讓花片 ⑥ 安裝到前叉管內中，直到保持器 ② 上的徑向環接觸到前叉管 (圖 5)。
5. 將保持器 ② 拆下時，雙頭螺絲 ③ 可能仍鎖固在花片 ⑥ 中，此時你可使用一字起將雙頭螺絲 ③ 拆下，最後再依立管及碗組安裝說明書確實安裝 (圖 6)。

聯絡方式

若有任何問題, 請上技術網頁 : http://www.fullspeedahead.com/contact 或聯絡:

Full Speed Ahead, USA
12212 Cyrus Way Mukilteo, WA 98275-5702
Tel: 1_425_488_8653 Fax: 1_425_489_1082

Full Speed Ahead, Europe
Via Del Lavoro, 56 20874 Busnago, Milan, Italy
Tel: +39_039_688_5265 Fax: +39_039_682_3336

TH INDUSTRIES / FSA Asia
NO.6, Wu-gong 8th Rd., Wufeng Dist., Taichung City 41353, Taiwan（R.O.C.）
Tel: +886_4_2331_9134 Fax: +886_4_2331_9314

備註: 規格會因功能改善而設變; 請參考我們網站上最新版本的使用說明文件。台灣印製

Headset Star-nut Driver & Guide Instructions

Published – Mar, 2011. ZS109.v1 © Full Speed Ahead

WWW.FULLSPEEDAHEAD.COM

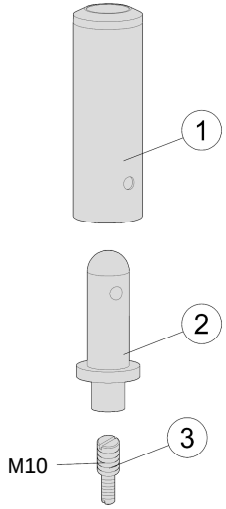

Fig.1

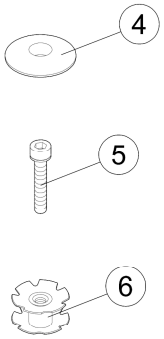

Fig.2

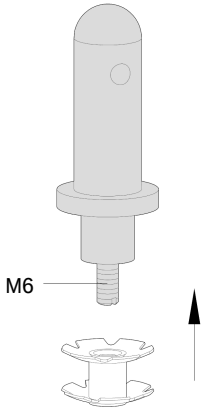

Fig.3

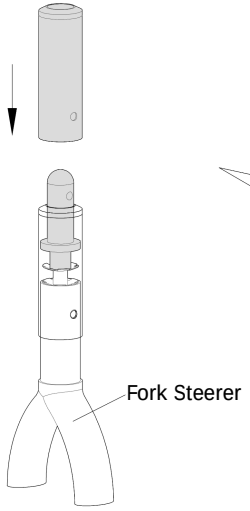

Fig.4

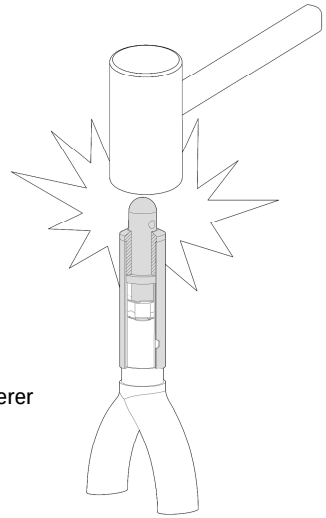
Fig.5

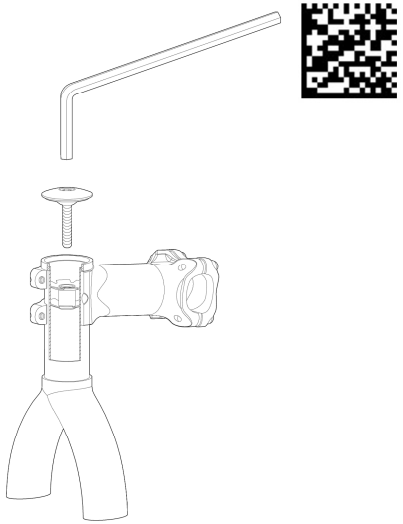
Fig.6

Introduction

Congratulations on your Full Speed Ahead product. Please read these instructions and follow them for correct use. Failure to follow the warnings and instructions could result in damage to product not covered under warranty, damage to bicycle; or cause an accident resulting in injury or death. Since specific tools and experience are necessary for proper installation, it is recommended that the product be installed by a qualified bicycle technician. FSA & Vision assumes no responsibility for damages or injury related to improperly installed components.

Warranty

Full Speed Ahead (FSA) warrants all FSA, Gravity, Vision, Metropolis and RPM products to be free from defects in materials or workmanship for a period of two years after original purchase unless otherwise stated in the full warranty policy. The warranty is non-transferable and valid to the original purchaser of the product only. Any attempt to modify the product in any way such as drilling, grinding, and painting will void the warranty. For more information on warranty policy and instructions for completing a warranty claim, check out the Full Warranty Policy found at our website: http://www.fullspeedahead.com/techdoc

Specification

Item Number / Model Name **QR-11**

Components

Follow the assembly order in the illustration:

① Driver guide
② Handle
③ Driver Pin
④Top Cap
⑤ M6 Preload Bolt
⑥ Star-Fangled Nut

Installation

1. Separate the Top Cap ④, M6 Preload Bolt ⑤, and Star-Fangled Nut ⑥ (Fig.2). ⚠ WARNING Do NOT insert star-fangled nuts into forks with carbon steerer tubes.
2. Thread the M10 Driver Pin ③ to the Handle ② (Fig.1), Thread the Star-Fangled Nut ⑥ to the M6 Driver Pin ③ (Fig.3).
3. Holding the handle ②, insert the star-fangled nut ⑥ into fork steerer tube as far as possible by hand. Then put the Drive Guide ① over the handle ② (Fig.4). The Driver Guide will ensure the Star-Fangled nut is inserted straight into steerer tube.
4. Hit the exposed top of the handle ② with a hammer until the shoulder of the handle ② bottoms out on top of fork steerer (Fig.5).
5. Remove the handle ②. If the Driver Pin ③ does not unscrew from the star-fangled nut when loosening the Handle, use a slotted screwdriver to remove the Driver Pin from the fork. Then install the stem and headset cap following the manufactures' instructions (Fig.6).

Contact

If you have questions, please visit our web site technical section: http://www.fullspeedahead.com/contact or contact:

Full Speed Ahead, USA
12212 Cyrus Way Mukilteo, WA 98275-5702
Tel: 1_425_488_8653 Fax: 1_425_489_1082

Full Speed Ahead, Europe
Via Del Lavoro, 56 20874 Busnago, Milan, Italy
Tel: +39_039_688_5265 Fax: +39_039_682_3336

TH INDUSTRIES / FSA Asia
NO.6, Wu-gong 8th Rd., Wufeng Dist., Taichung City 41353, Taiwan（R.O.C.）
Tel: +886_4_2331_9134 Fax: +886_4_2331_9314

Notes: Specifications of product may be changed or improved for performance. Please refer to website periodically for technical updates and revised instructions. Printed in Taiwan.