Bottle Cage Installation Instructions

Published – Jan, 2025. ZS092.v1 © Full Speed Ahead

WWW.FULLSPEEDAHEAD.COM

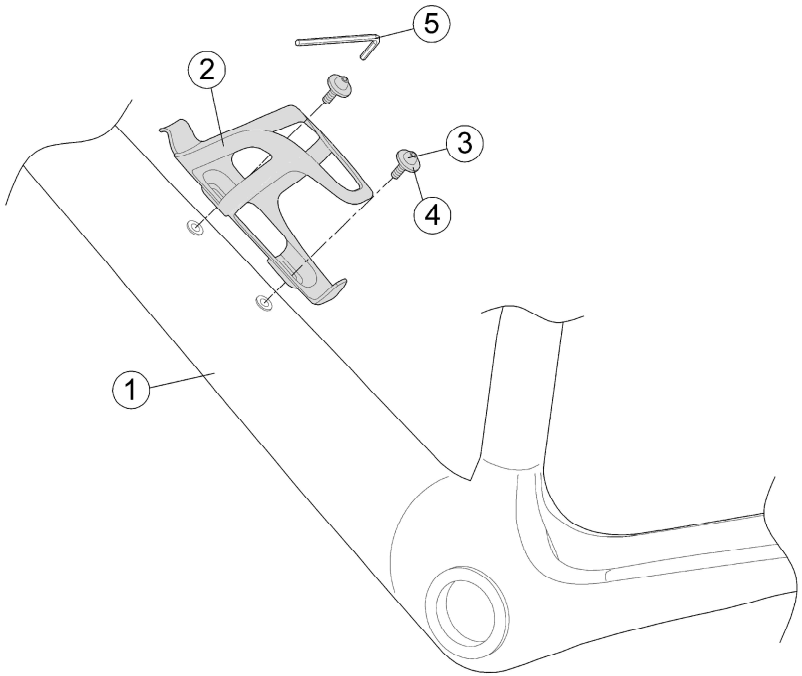

Introduction

Congratulations on your Full Speed Ahead product. Please read these instructions and follow them for correct use. Failure to follow the warnings and instructions could result in damage to product not covered under warranty, damage to bicycle; or cause an accident resulting in injury or death. Since specific tools and experience are necessary for proper installation, it is recommended that the product be installed by a qualified bicycle technician. FSA & Vision assumes no responsibility for damages or injury related to improperly installed components.

Warranty

Full Speed Ahead (FSA) warrants all FSA and Vision products to be free from defects in materials or workmanship for a period of two years after original purchase unless otherwise stated in the full warranty policy. The warranty is non-transferable and valid to the original purchaser of the product only. Any attempt to modify the product in any way such as drilling, grinding, and painting will void the warranty. For more information on warranty policy and instructions for completing a warranty claim, check out the Full Warranty Policy found at our website: https://www.fullspeedahead.com/en/support/warranty-policy

Specification

Model Name K-Force Bottle Cage

Components

Follow the assembly order in the illustration:

① Downtube
② Bottle Cage x1
③ Bottle Cage Bolts x2
④ Washers x2
⑤ 4mm Allen Wrench x1 (Not included)

Water Bottle Fittings Installation

The K-Force Bottle Cage requires bottle cage mounting rivets in the standard location in the frame. Do not attempt to modify the K-force Bottle Cage to fit in other applications.

1. Remove bolts ③: Loosen the Bottle Cage Bolts from the frame. Ensure the threads of the mounting rivets are clean of debris, paint, and metal chips.
2. Line-up the Bottle Cage ②: Place your bottle cage on the frame with mounting holes lined up with the mounting rivets on the frame.
3. Installing bolts ③: Put a light layer of grease on the Bottle Cage Bolt threads. While holding the bottle cage in proper position, hand tighten the bolts into the mounting rivets. Be careful not to cross-thread the Bottle Cage Bolts.

⚠ WARNING Do not Tighten the Bottle Cage Bolt ③ without washer ④. Doing so can avoid damage the Bottle Cage.

4. Tighten. Tighten the bolts to maximum 0.94-1.23 kgf.cm / 0.09-0.12 Nm / 0.81-1.06 in.lbs torque with 4mm Allen Wrench ⑤.

⚠ CAUTION Over tightening the Bottle Cage Bolts can cause the carbon Bottle Cage to crack which is not covered under warranty.

NOTICE The K-Force bottle cage holds a standard size water bottle: 7.3cm (2.875") in diameter and with an indentation 5″ from the bottom of the water bottle to engage and secure the bottle cage while riding.

Contact

If you have questions, please visit our web site technical section: https://www.fullspeedahead.com/en/support or contact:

Full Speed Ahead, USA
12212 Cyrus Way Mukilteo, WA 98275-5702
Tel: 1_425_488_8653 Fax: 1_425_489_1082

Full Speed Ahead, Europe
Via Del Lavoro, 56 20874 Busnago, Milan, Italy
Tel: +39_039_688_5265 Fax: +39_039_682_3336

TH INDUSTRIES / FSA Asia
NO.6, Wu-gong 8th Rd., Wufeng Dist., Taichung City 41353, Taiwan（R.O.C.）
Tel: +886_4_2331_9134 Fax: +886_4_2331_9314

Notes: Specifications of product may be changed or improved for performance. Please refer to website periodically for technical updates and revised instructions. Printed in Taiwan.